



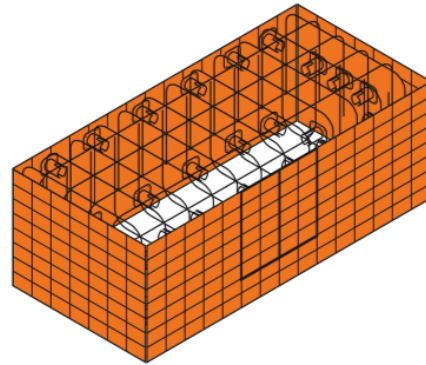

Novoform™ Permanent Formwork for Reinforced Crane Pad **Foundations: 80 to 120 inches deep** **Method of Installation**

Position cage to line and level in trench.


Spacers to be placed no greater than 12 inches apart in both vertical and horizontal directions.

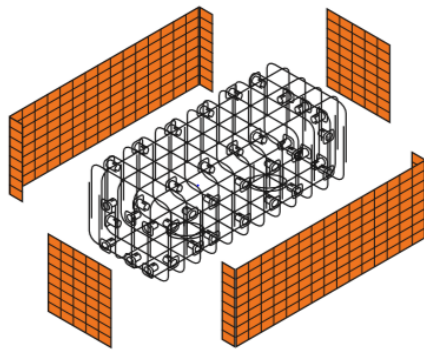

Place Novoform™ against spacers on rebar cage.

Tie Novoform™ panels together with wire mesh ties.

Novoform™ panels to be overlapped and secured with wire ties, to achieve required depth of foundation.

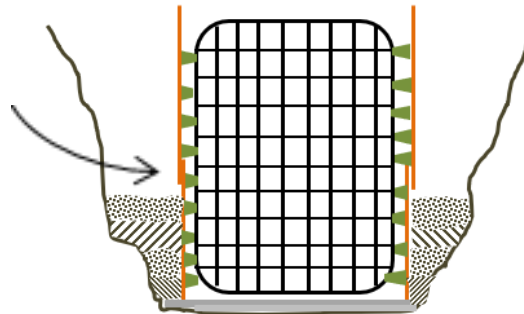

Cross-section of crane pad

Backfill should be compacted in stages and the concrete foundation poured at same time to counter the pressure of compacted backfill.

